




# User Manual





**Step 1 - Follow the guide to set up the remote control pairing, language, time zone, and network.**

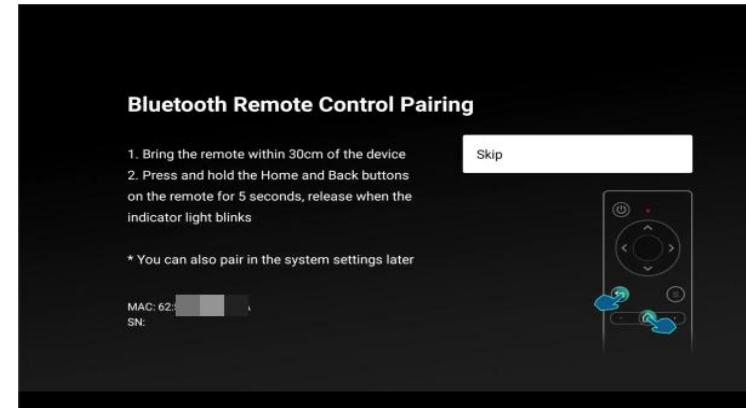



*Pairing the remote control makes it more convenient to operate.*

**Step 2 - Adjust the screen edges according to the instructions. (Display area settings can also be found at the following path: Setup - Device Preference - Display - Area Set)**

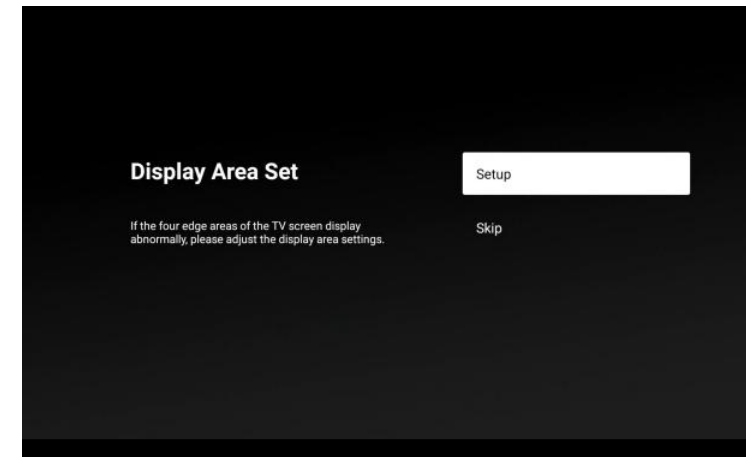


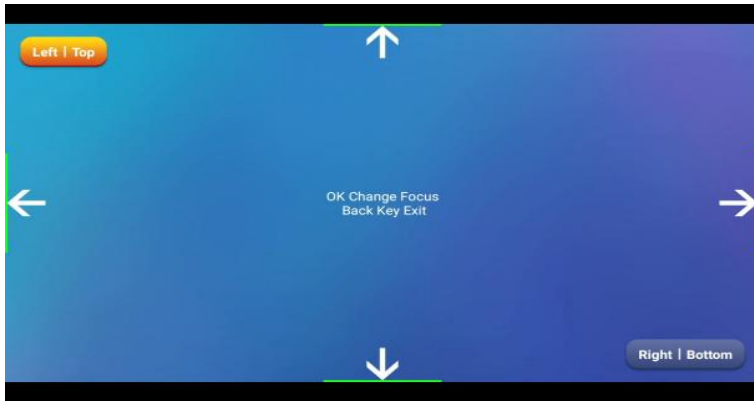


### Step 3 - Agree to the Disclaimer Notice

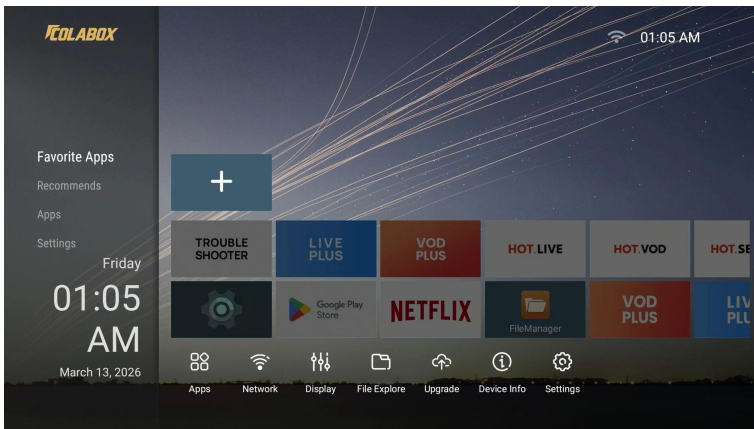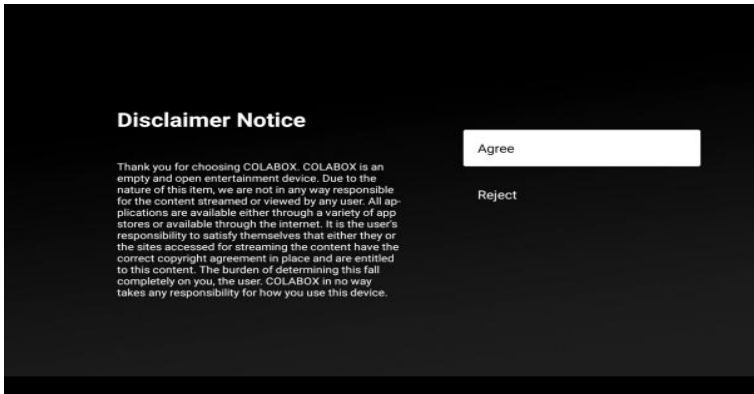

The desktop after completing the wizard.

Step 4 - Recommended apps will appear in the recommendation section, and it is recommended to download and use them one by one.

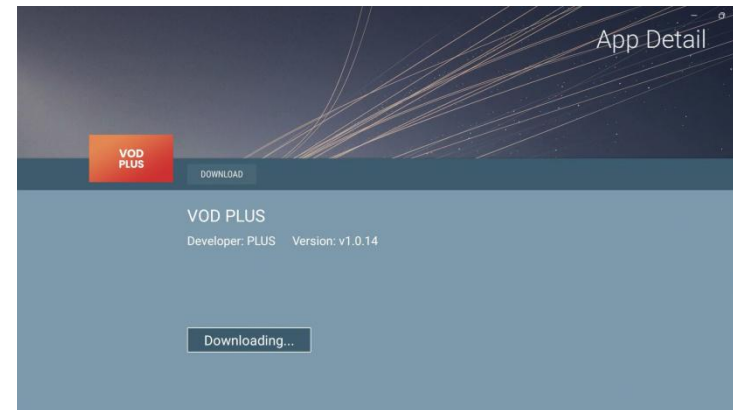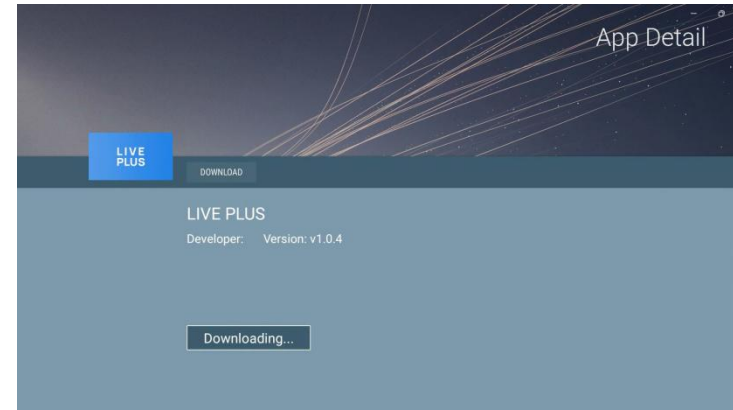

**Trouble Shooter** is the customer service portal. **LIVE PLUS** is live streaming. **VOD PLUS** is a movie or series.

**NOTE.** If your device is a 4K 30fps television, *issues such as audio-video desynchronization, screen Flickering/Juddering or Tearing, picture latency may occur when watching live broadcasts—particularly sports channels.* These problems are caused by a mismatch between the TV's and video's frame rates.

**To resolve this, please follow the steps below:**

Settings → Device Preferences → Display → Cancel HDMI AUTO ADAPTATION → Custom Display Format → Choose 1080P 60 OR 3840\*2160\_60 → OK